

# **WARNING**

**IT IS MOST IMPORTANT THAT THE  
PUMP DRIVING MOTOR SHOULD  
NOT BE STARTED UNTIL IT HAS  
BEEN ESTABLISHED THAT IT IS  
WIRED FOR CORRECT ROTATION**