

STAR DELTA WIRING DIAGRAM

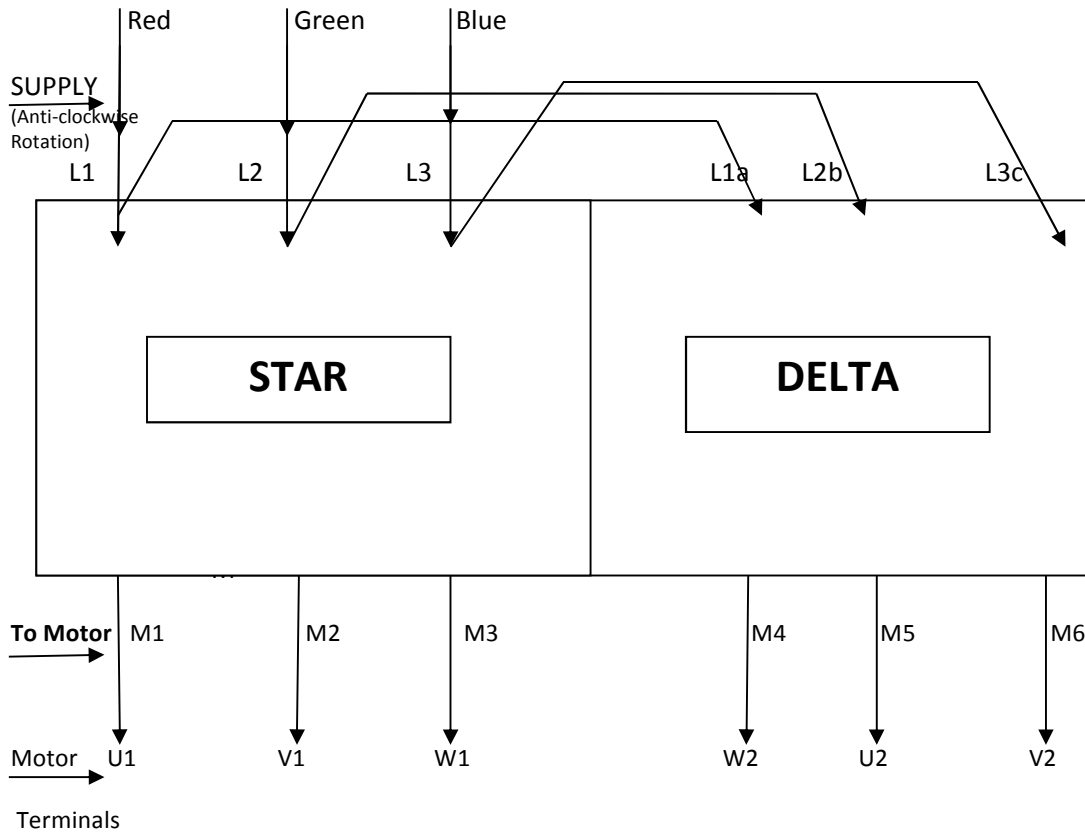


ABB MOTORS ONLY

The Pump should now start and run in the correct direction, namely Anti-Clockwise, as shown at the beginning of this document.



Warning:- *Always be Aware and Careful of Live Conductors. – if in doubt consult a Qualified Electrician.*

Note:- This Document applies to the Use of the Meterman EPM3* & Amprobe PRM 4 Phase Rotation Meters Only! – All Safety Instructions referred to in these manuals are applicable.