


Method

- 1) Make sure that the supply cable is **Disconnected** from the motor terminals.
- 2) Connect the Red, Green and Blue meter test leads to the phase rotation input terminals L1 (RED), L2 (GREEN) and L3 (BLUE) and clip them to the 3 supply cable conductors, making sure that the correct colours are connected to the correct meter terminals, as shown below.

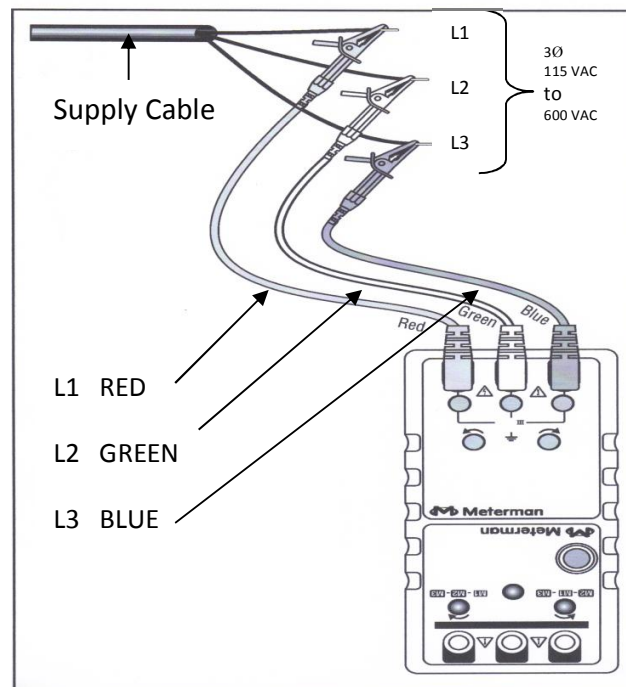

- 3) Switch on the power, and one of the phase rotation indicators will light up.
- 4) If the Anti-Clockwise light lights up, then simply connect L1 (RED) to the motor terminal U1, and L2 (GREEN) to the motor terminal V1 and L3 (BLUE) to the terminal W1 and the motor will run in the correct direction, namely ANTI-CLOCKWISE.